



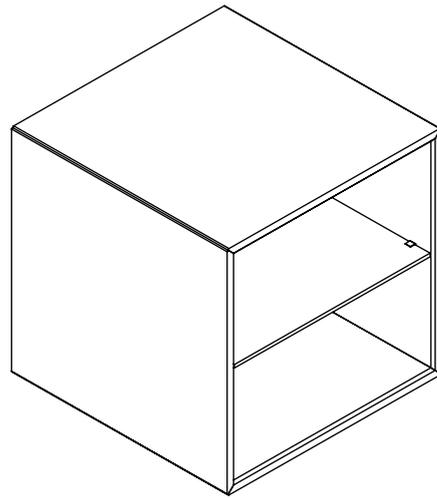
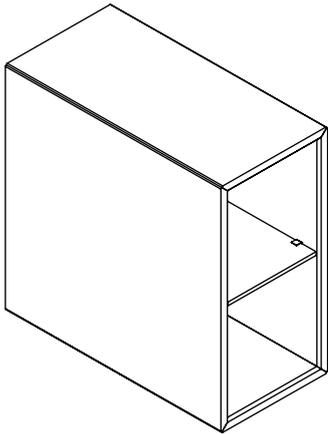
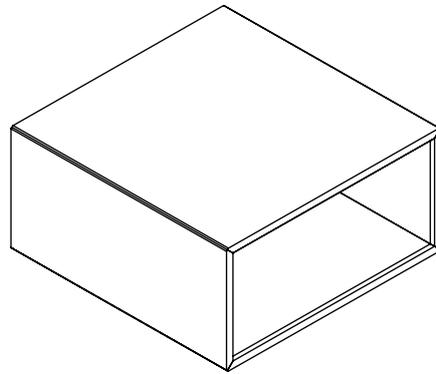
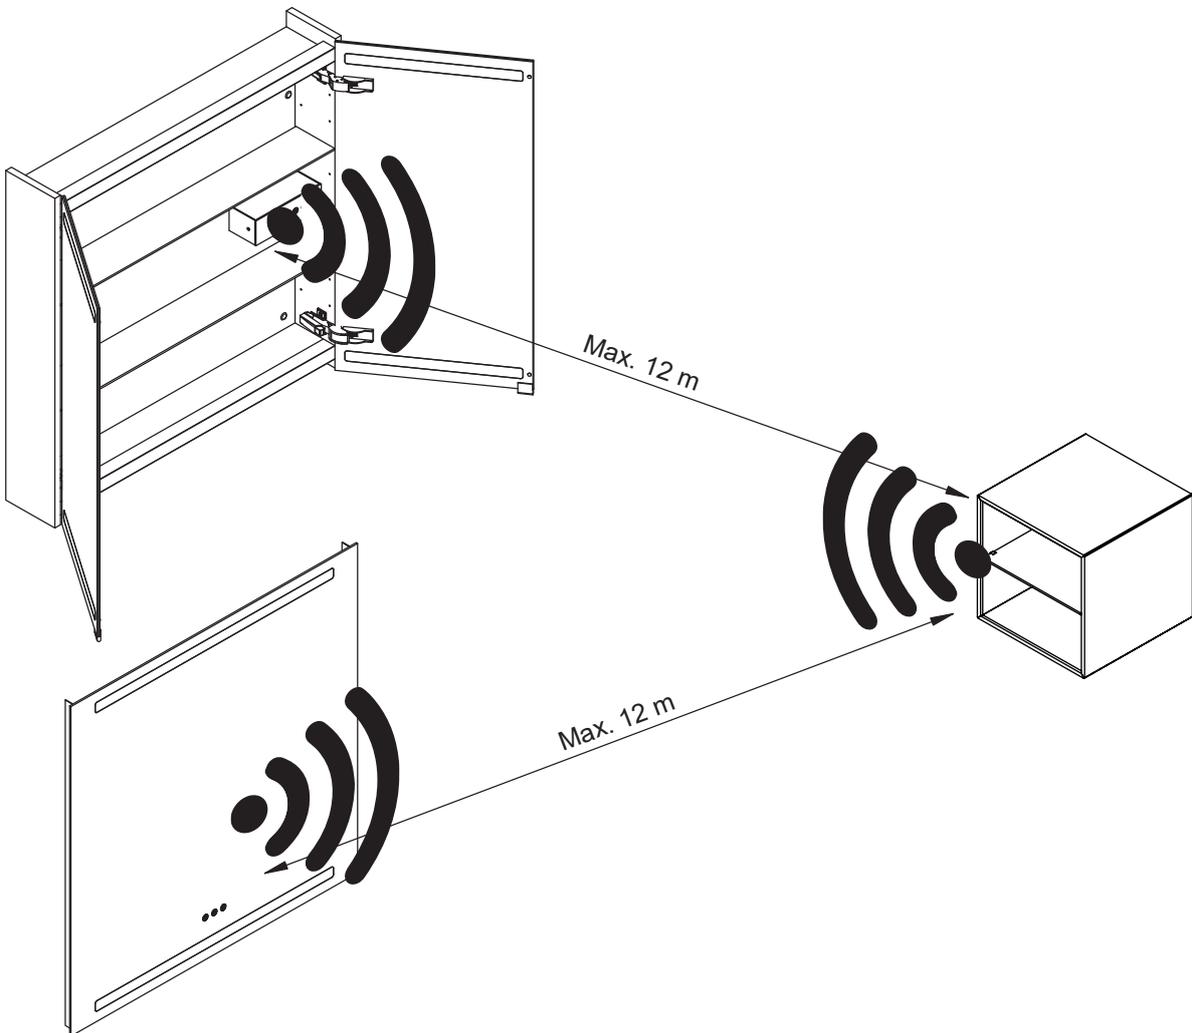


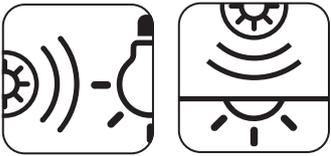

DANSANI
DANISH BATHROOM DESIGN

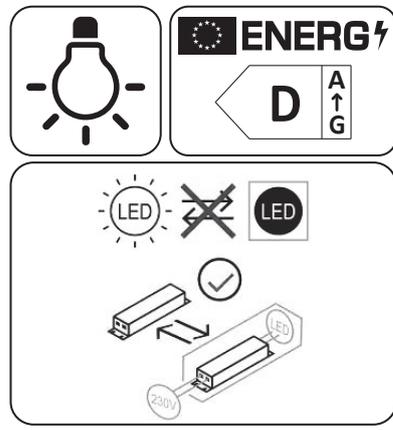

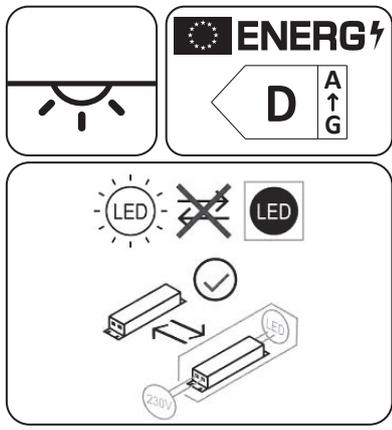




6x
5-500



2x
390010190





6x
5,0-60SU

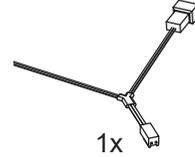

1x
190311427/428



4x
(4,0-30SU)



6x
5-500



2x
390010190




6x
5,0-60SU



2x
544800400



4x
415533

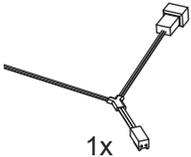

1x
190311427/428



4x
(4,0-30SU)



1x
6201x0x00

1

A



4x
5-500

B




2x
390010190

C




4x
5,0-60SU

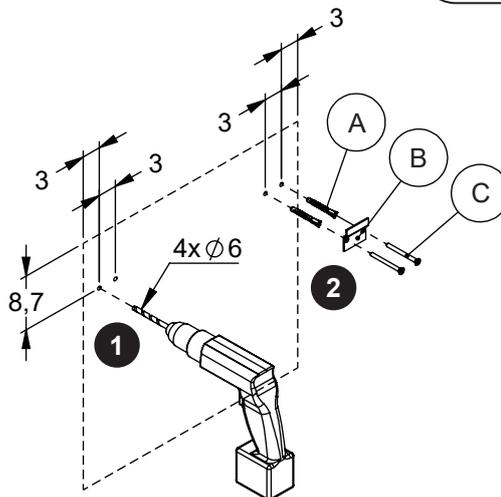


- 1 Ø6
- 2 SILICONE
- 3 A
- 4 SILICONE


2

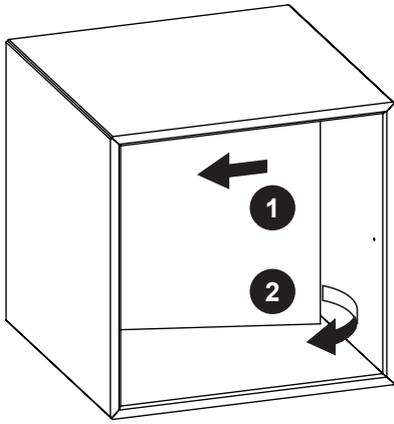


3

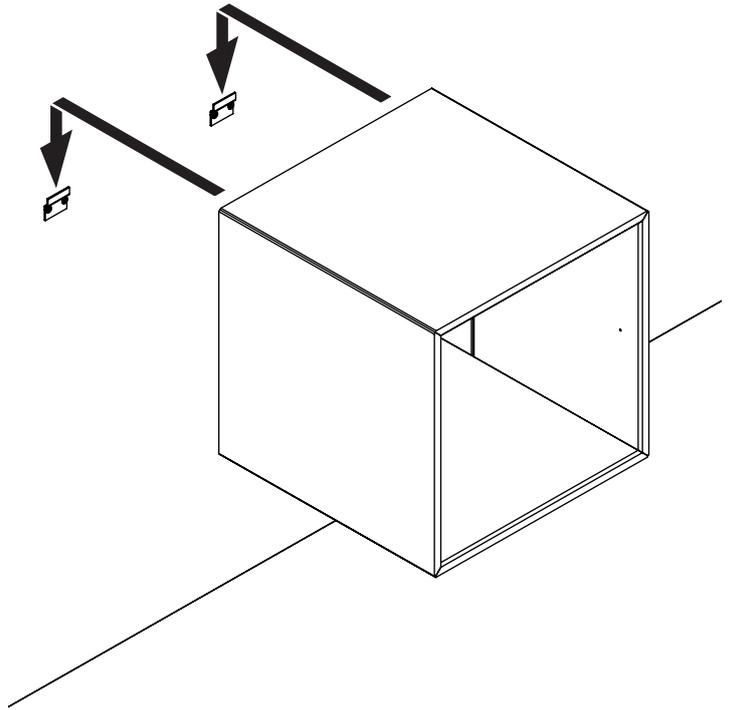


4A

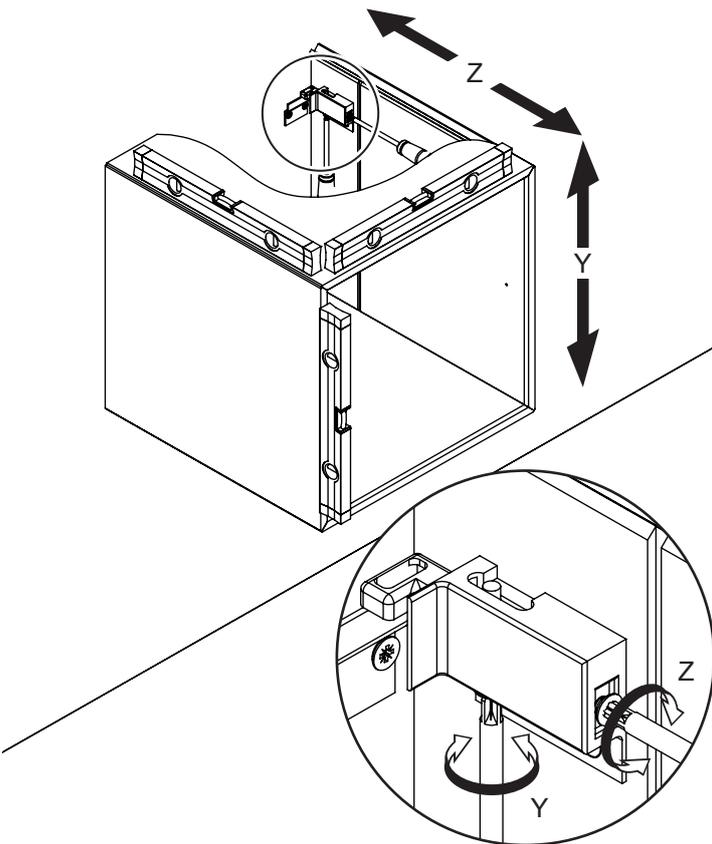




4B

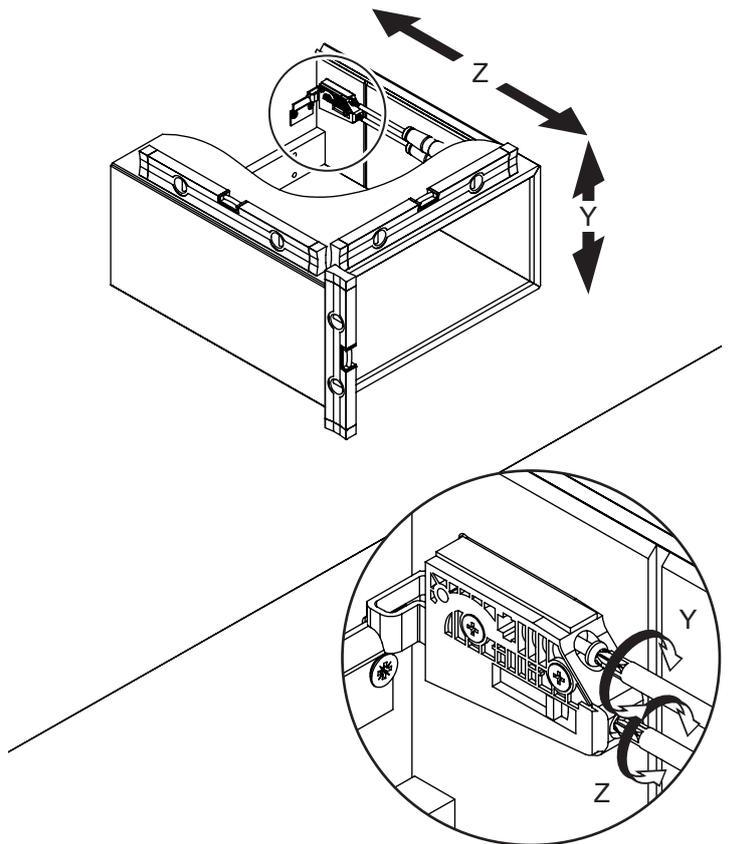


5A

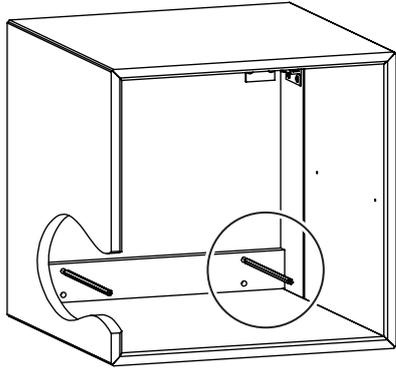




5B

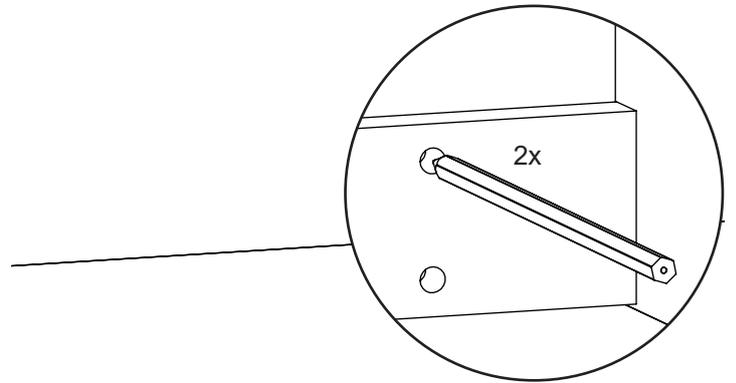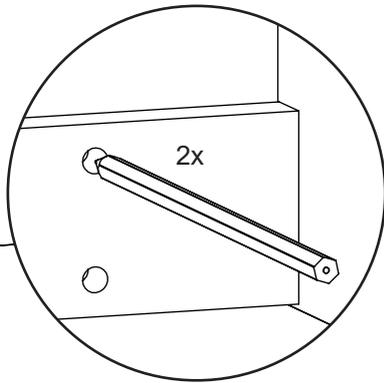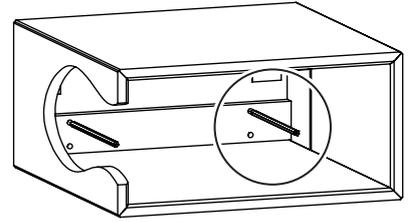


6

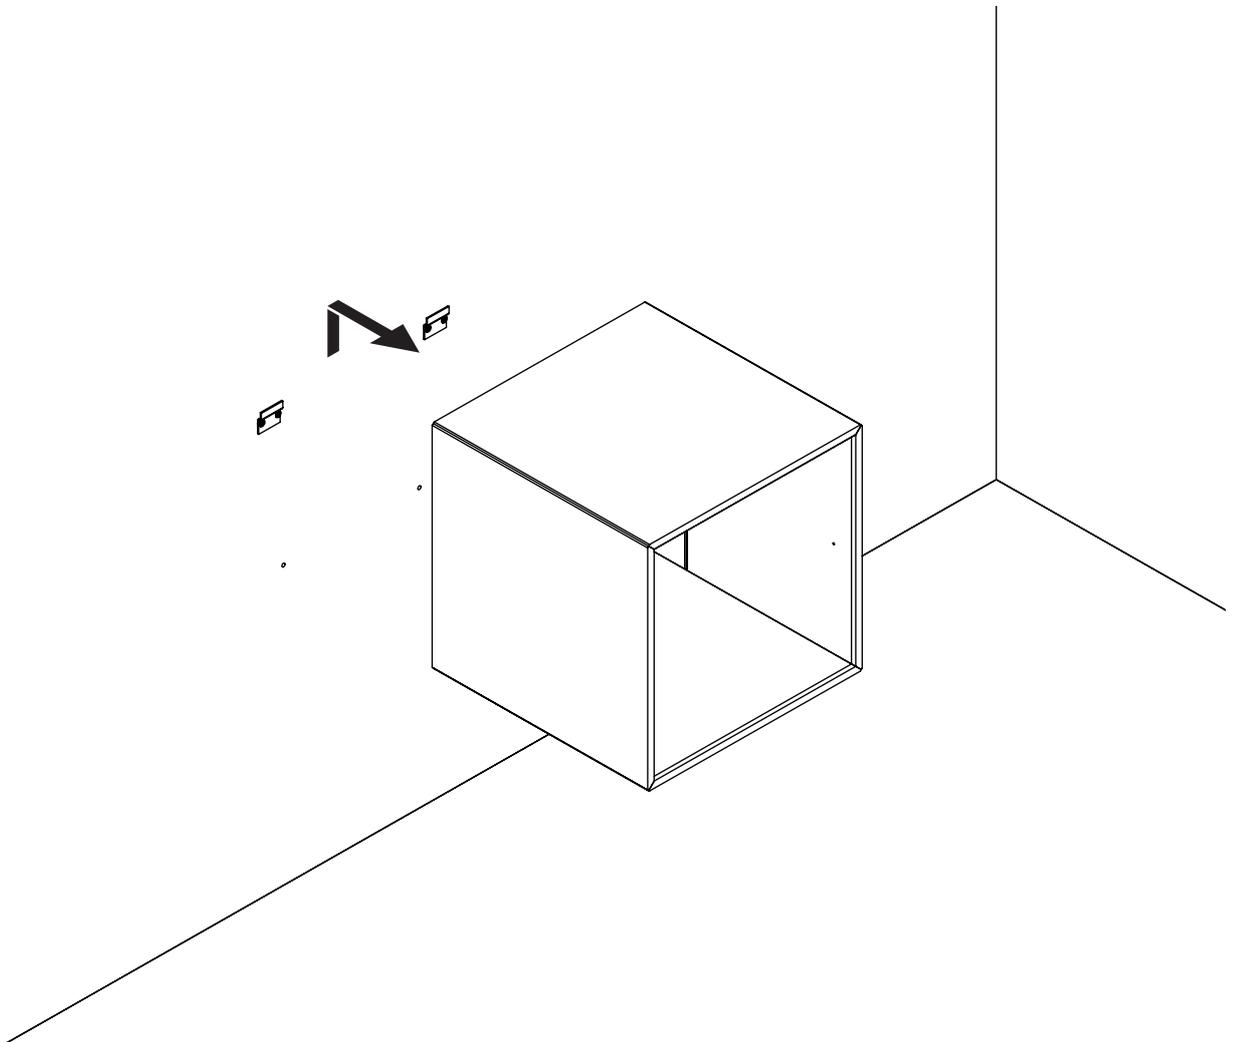





7

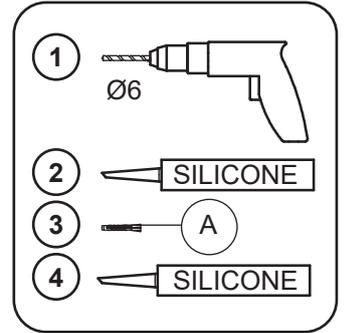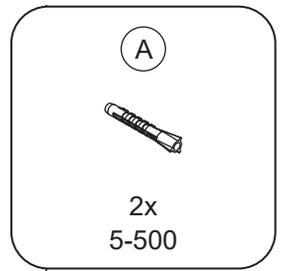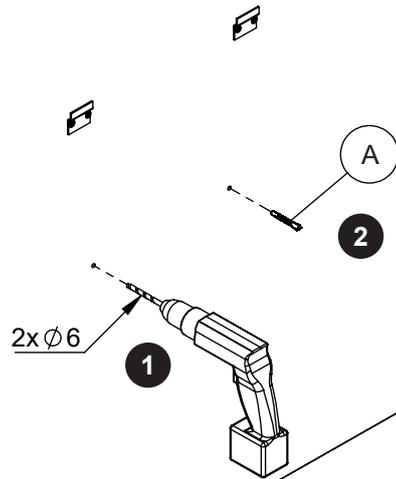


8

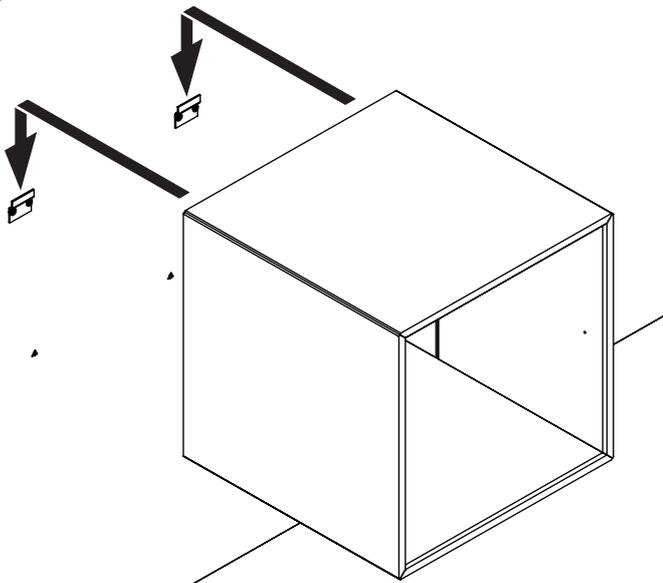


9

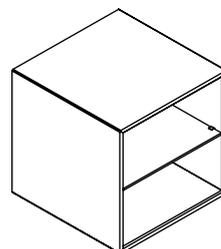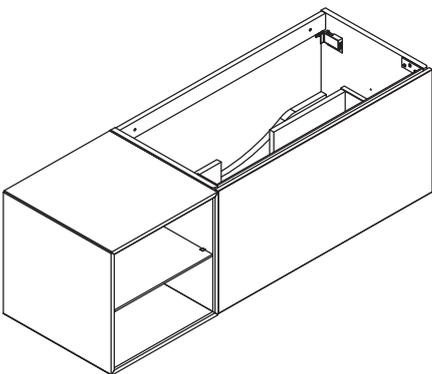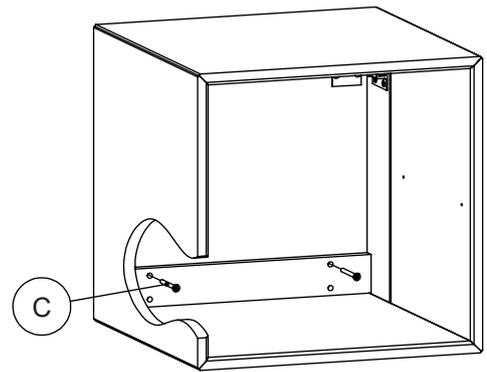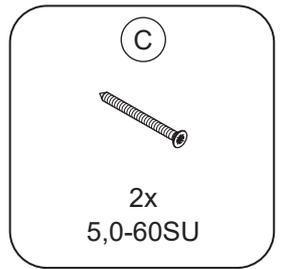

10

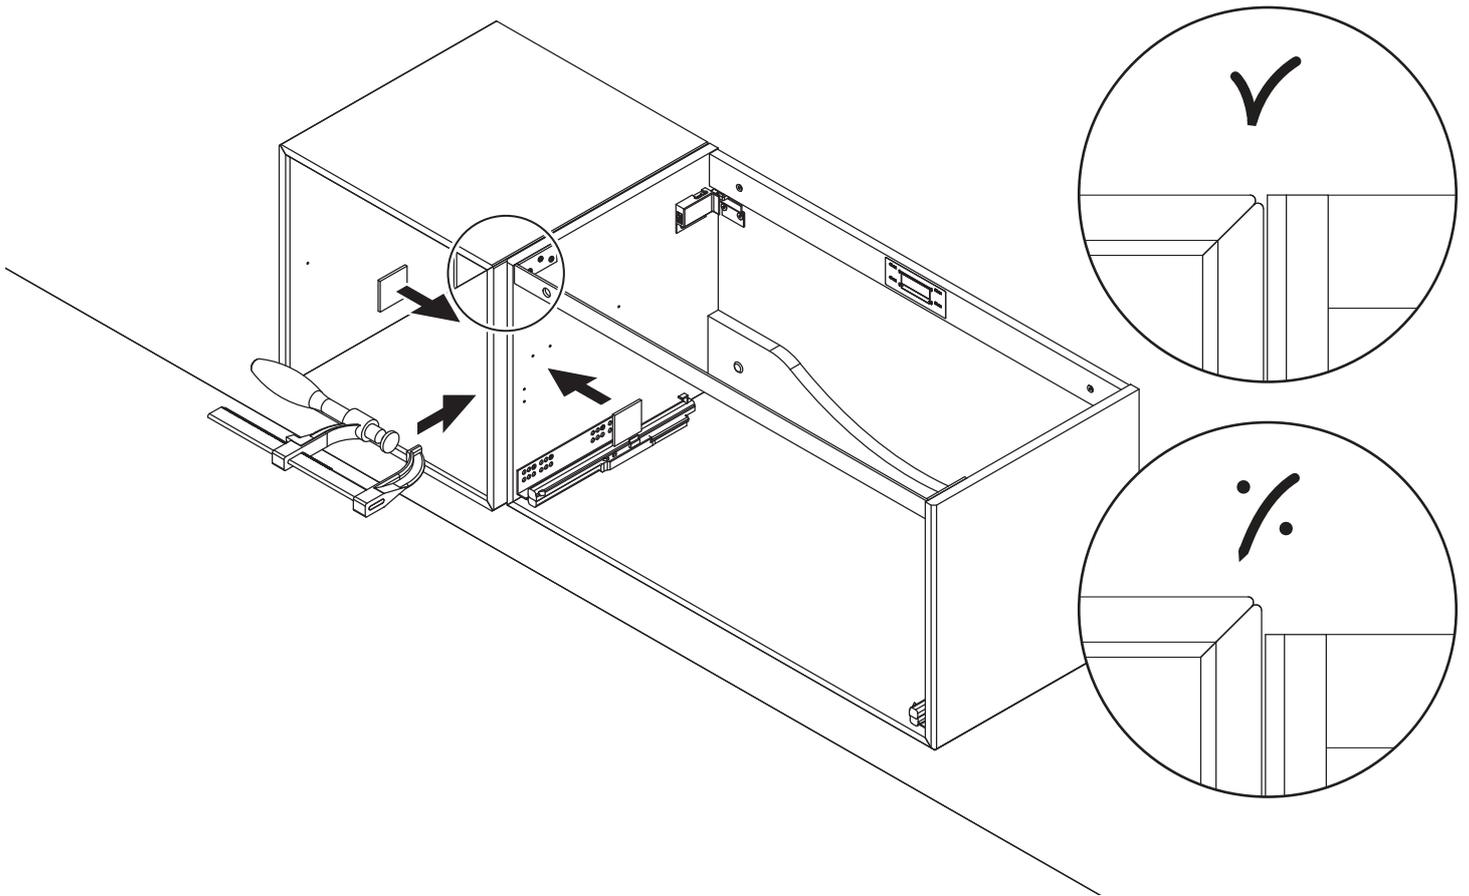



11

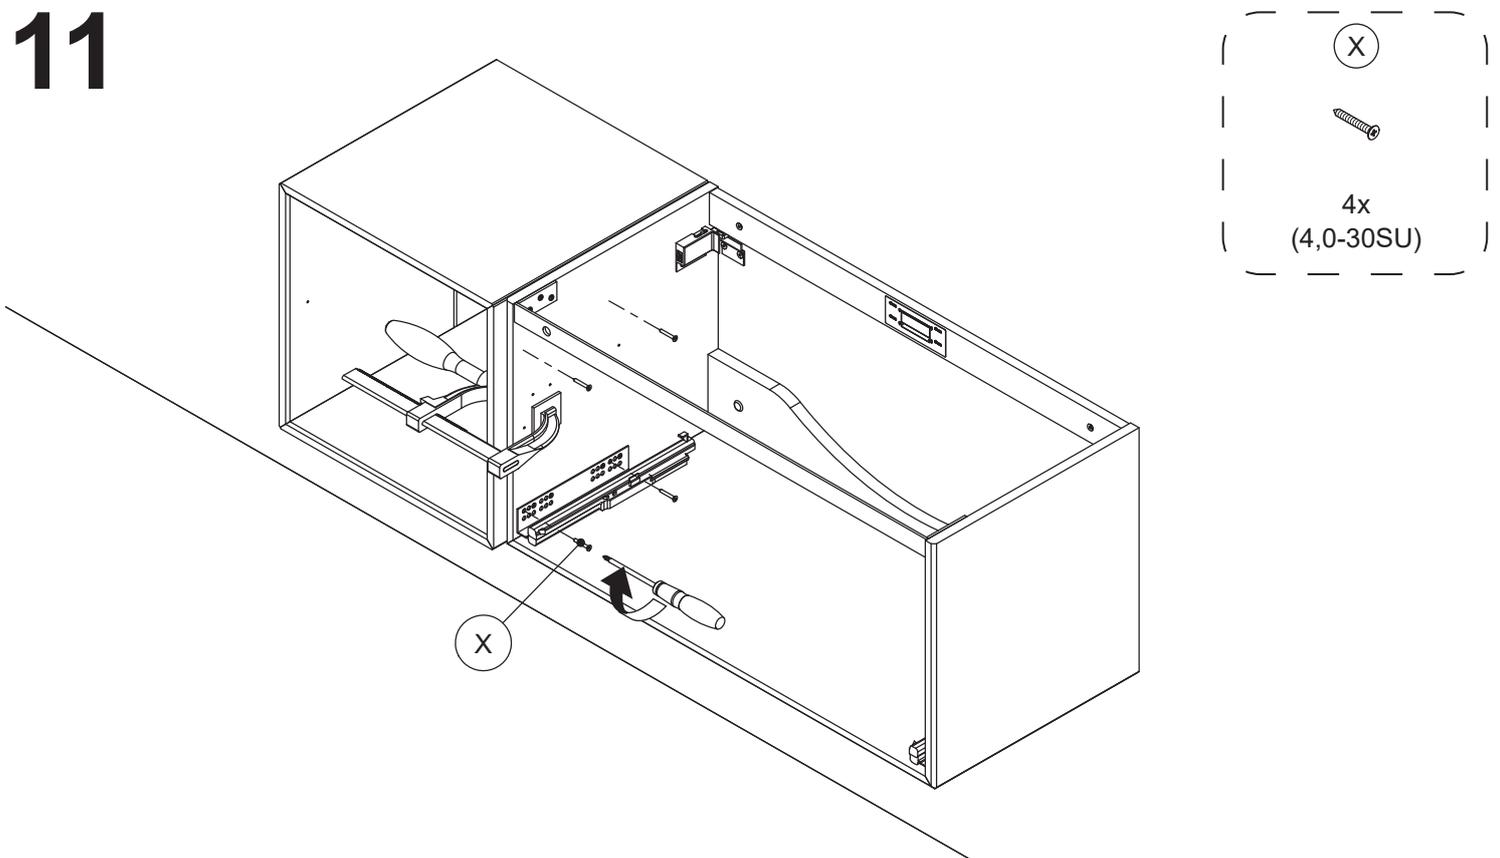

➔ 12



➔ 22

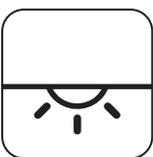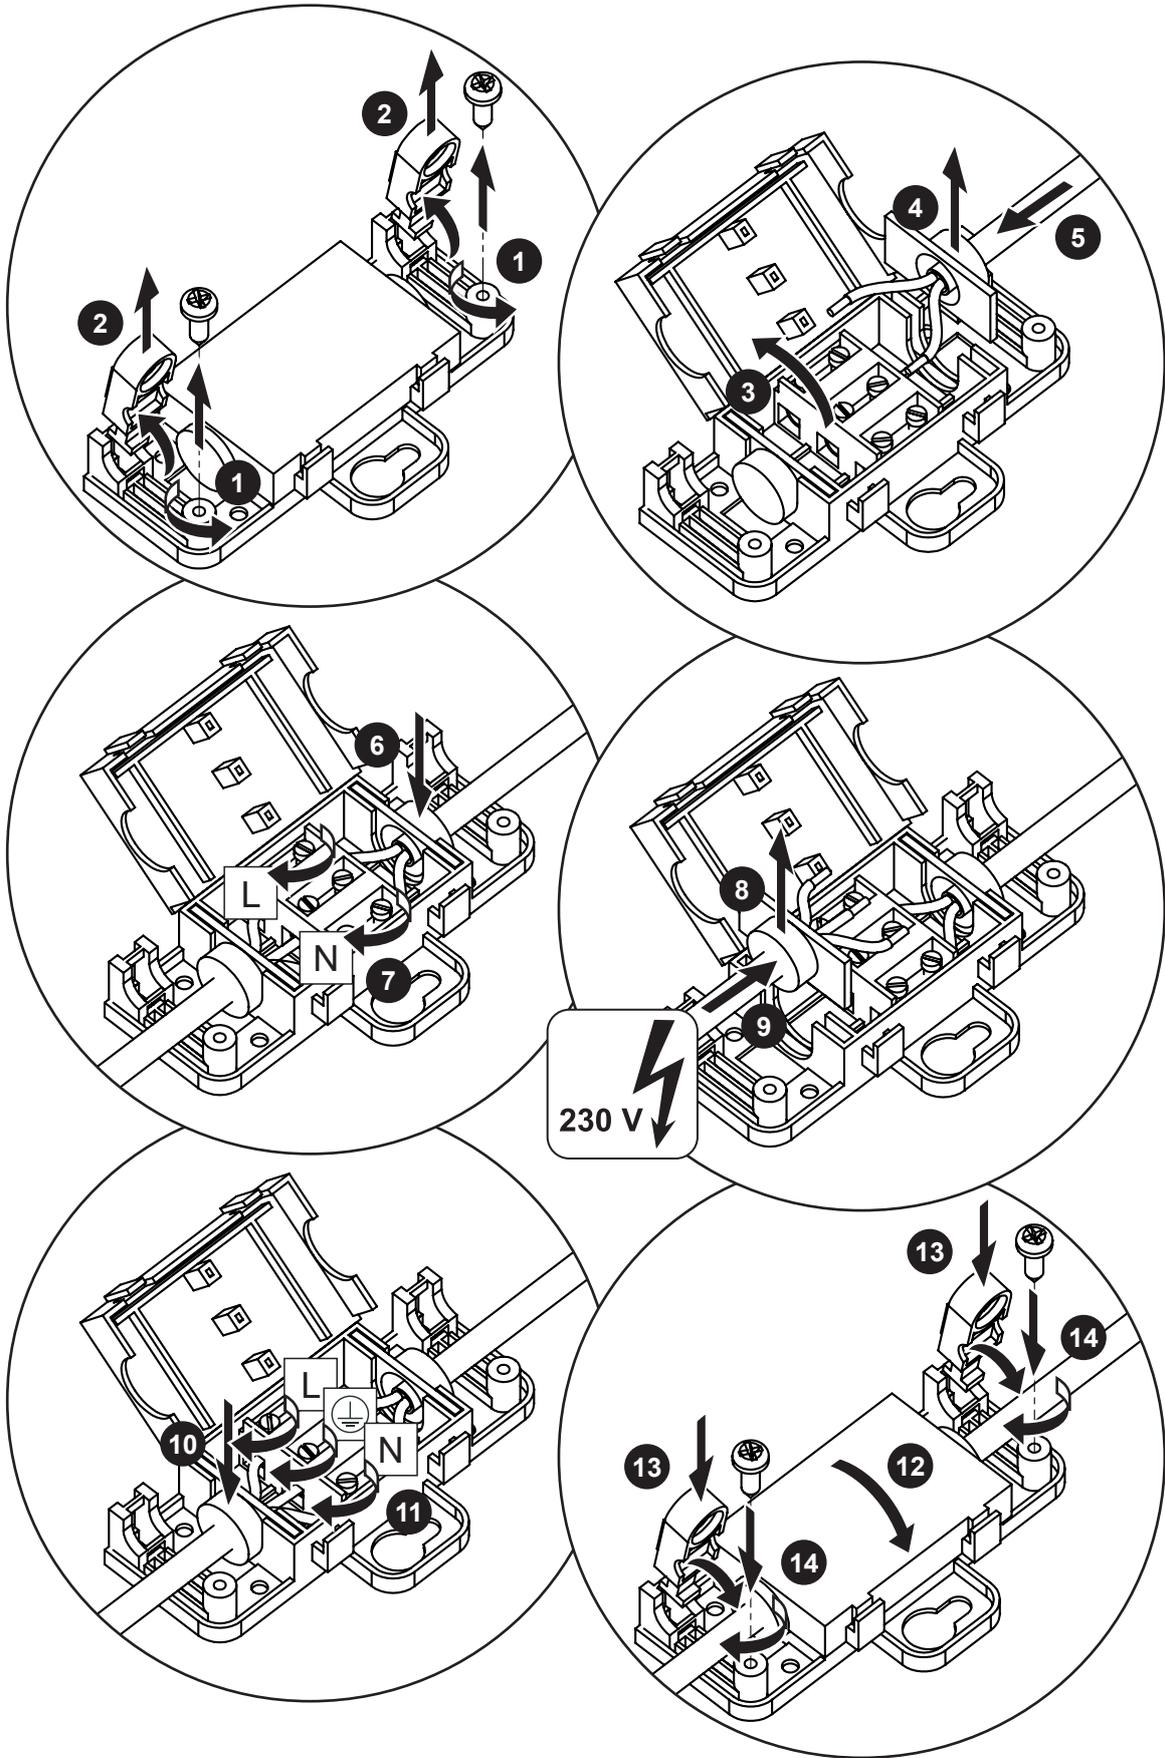

→ 13





→ 15A




→ 19


13

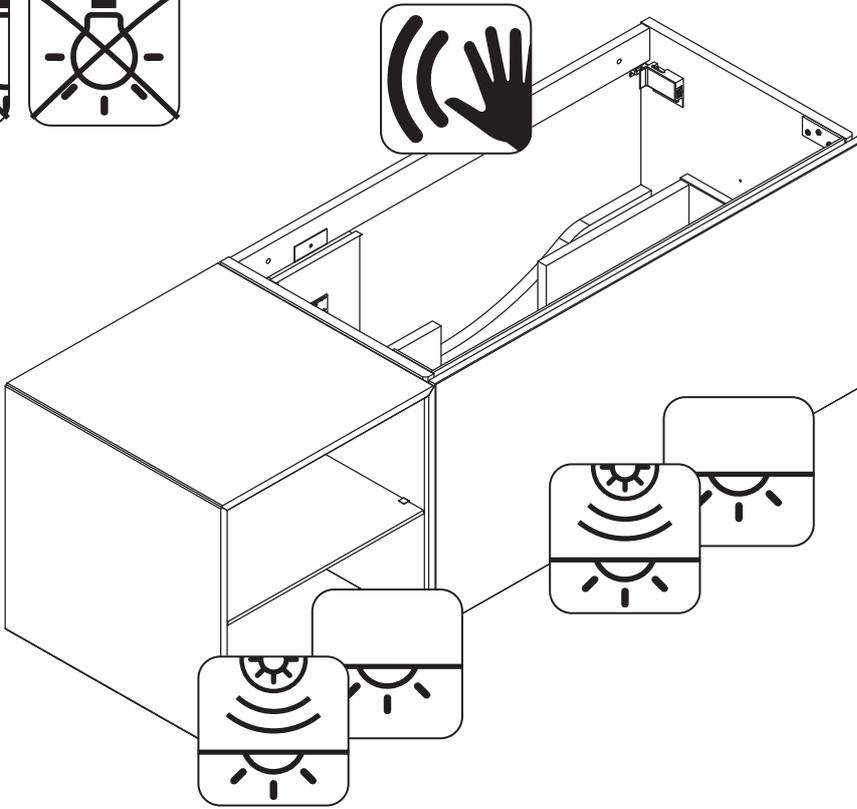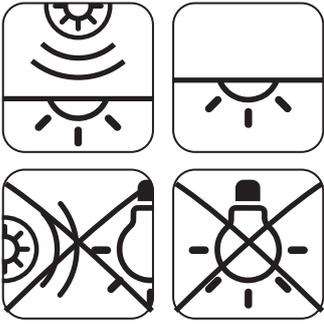

→ 14




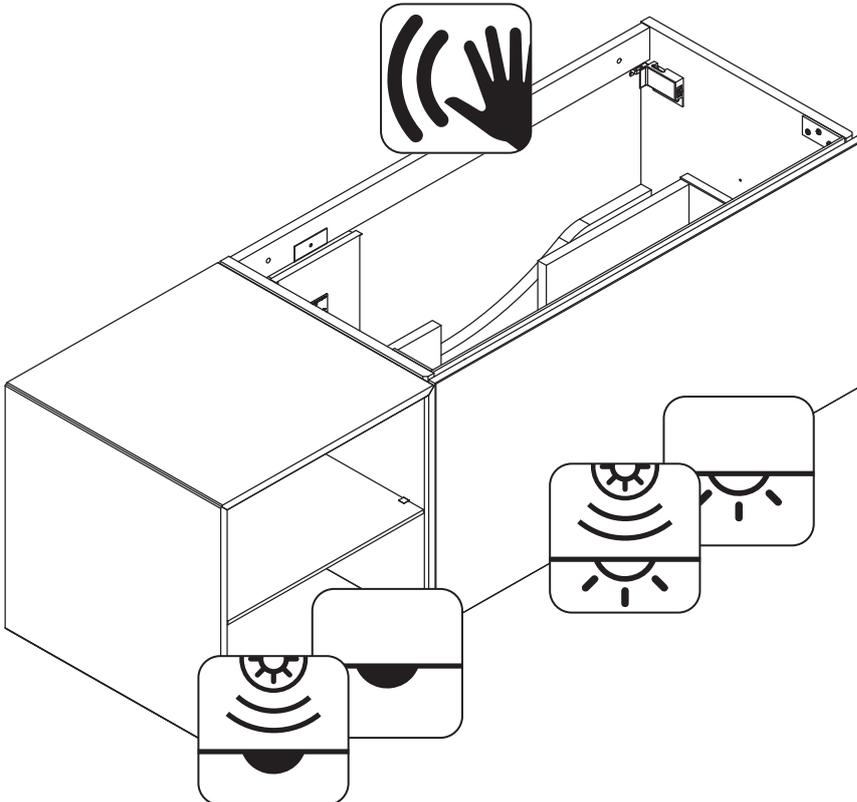


→ 15A

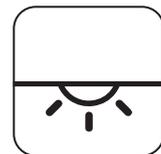


→ 19

14

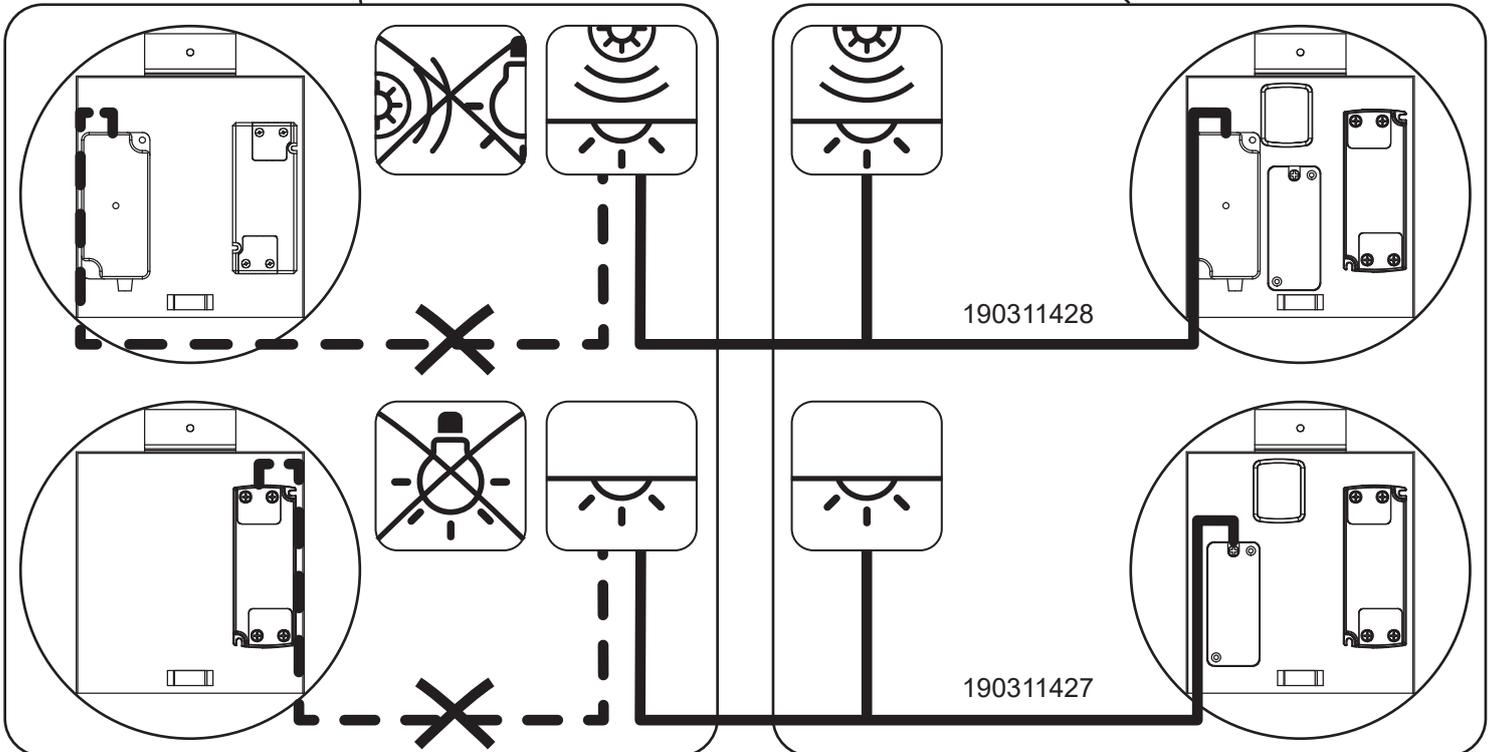
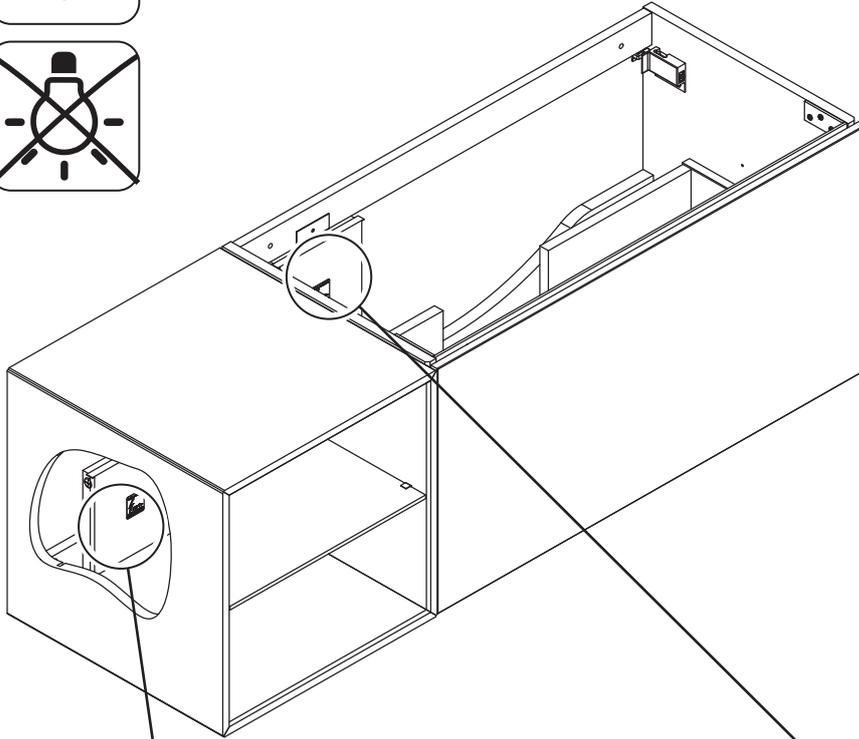
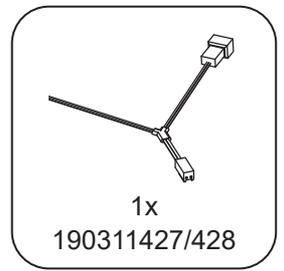
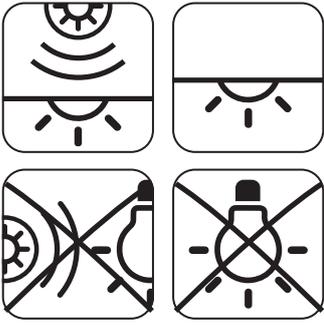



→ 15B

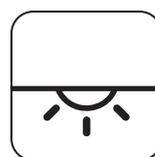

→ 19

15

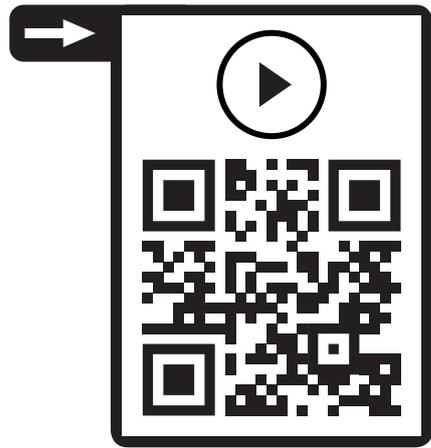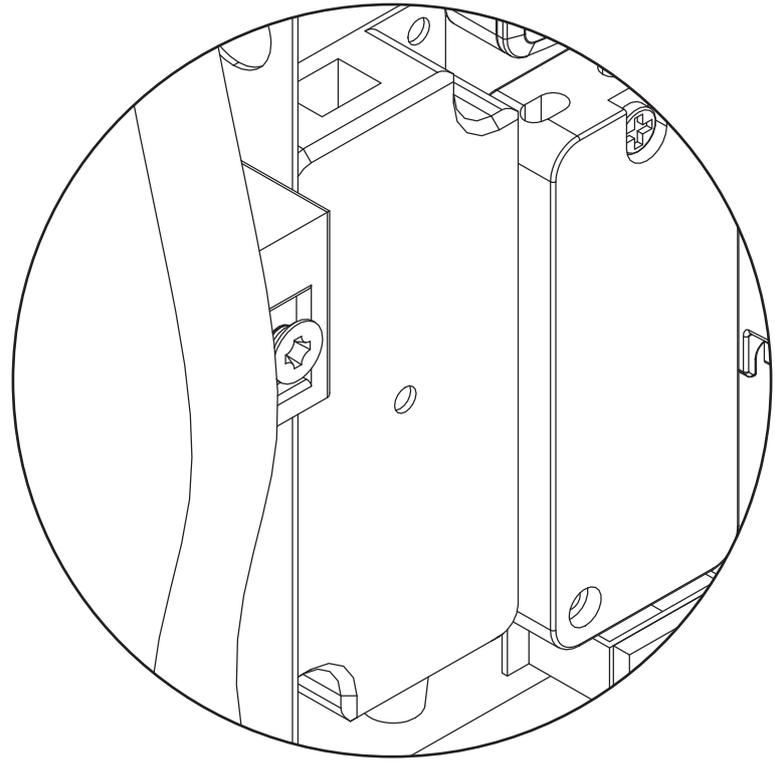
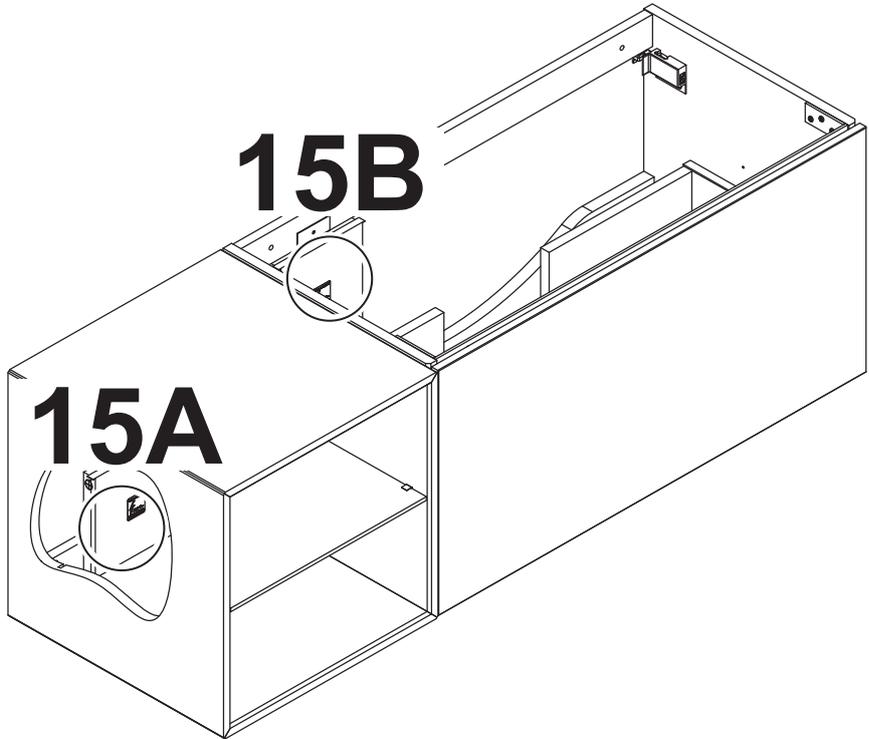
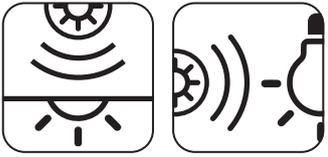


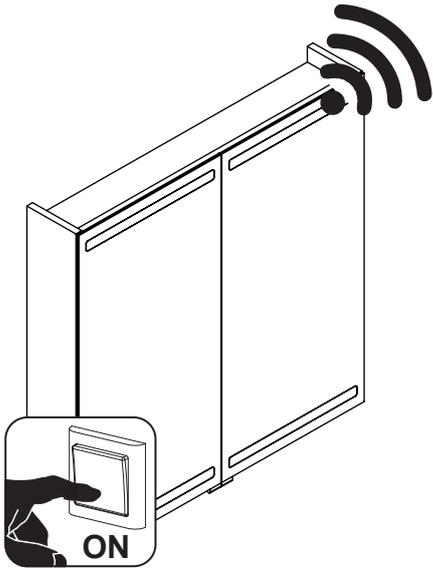




16+17+18






16

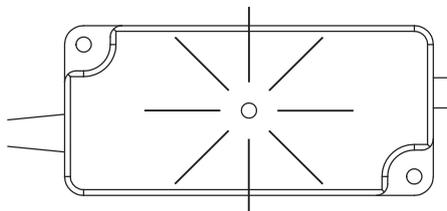
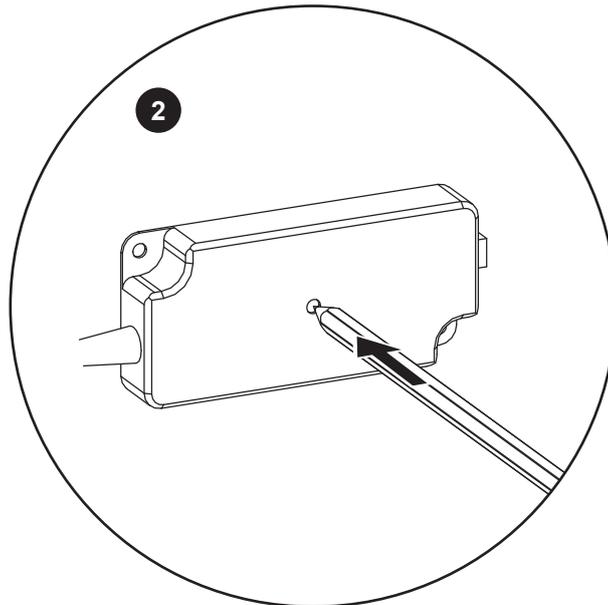
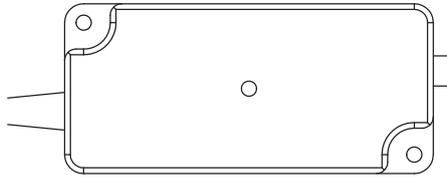


17

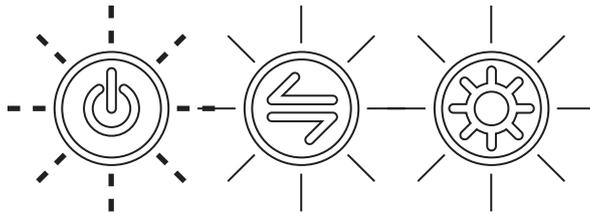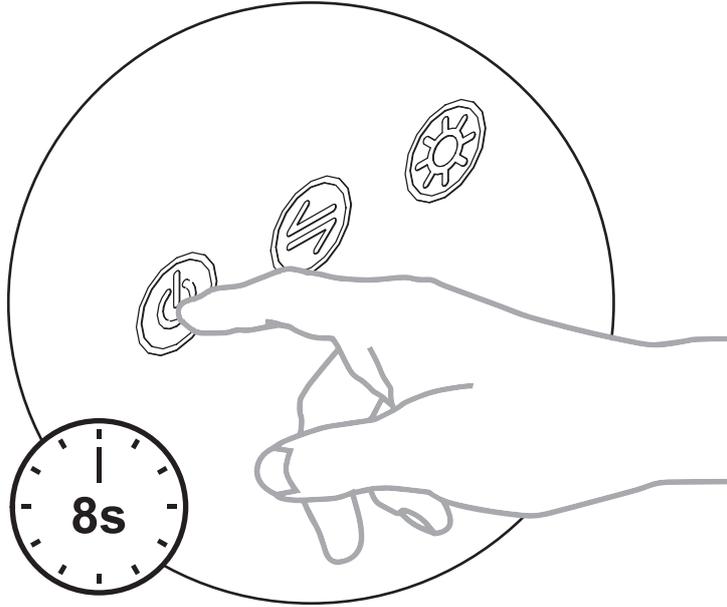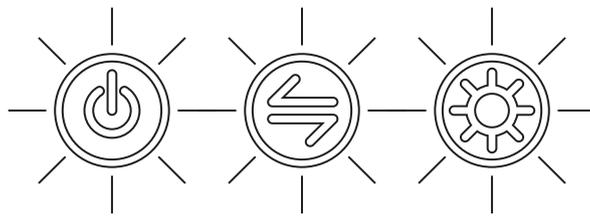


18

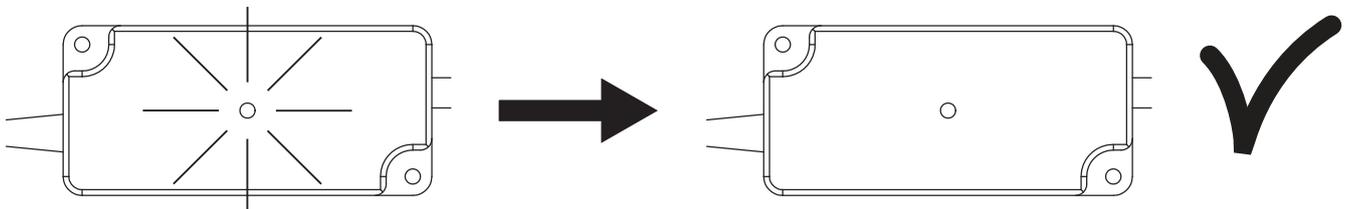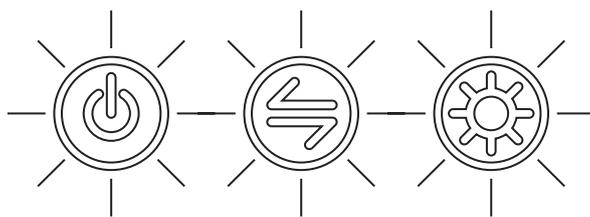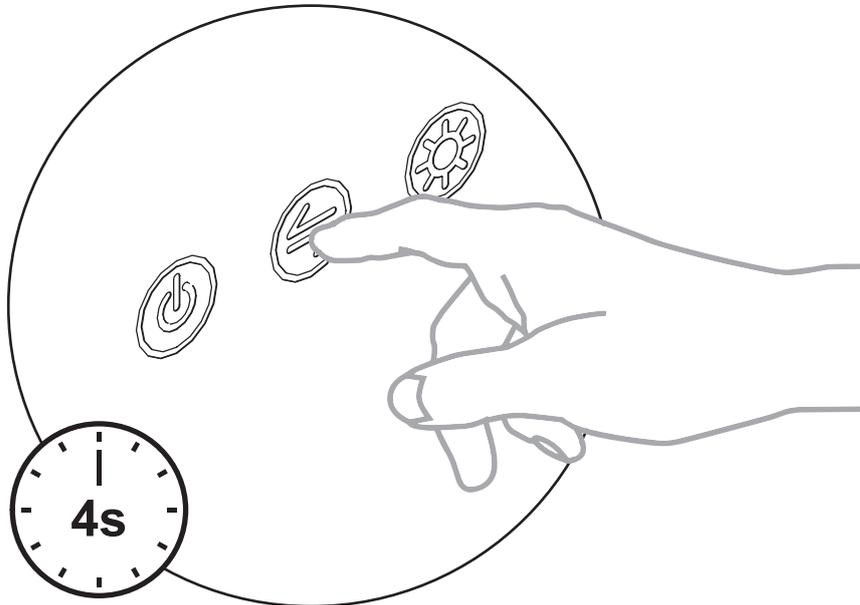


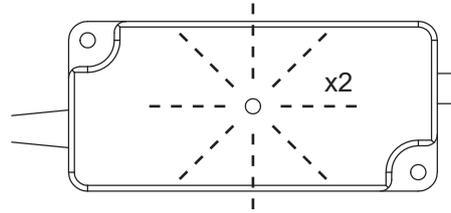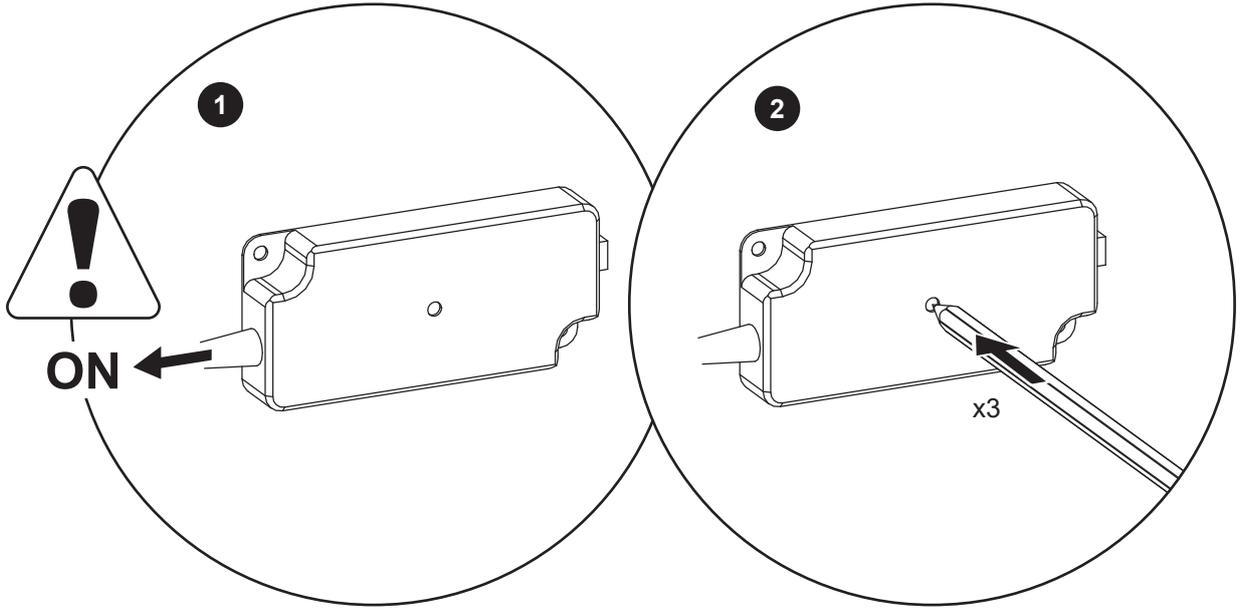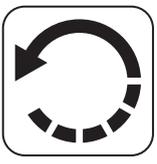


19

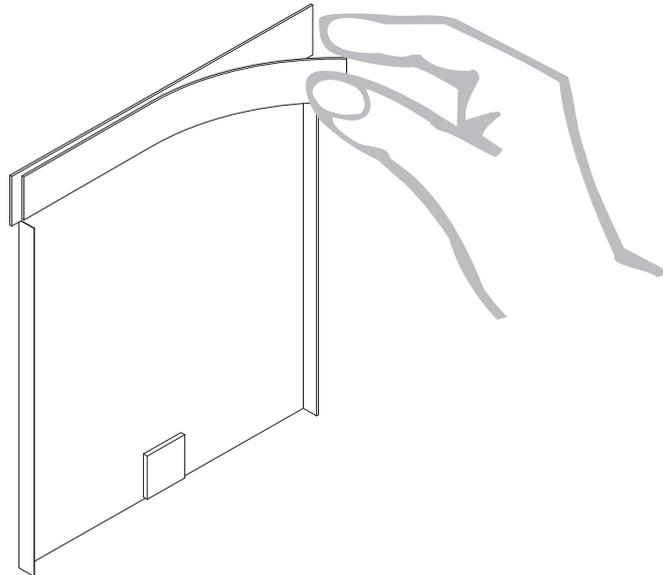


20

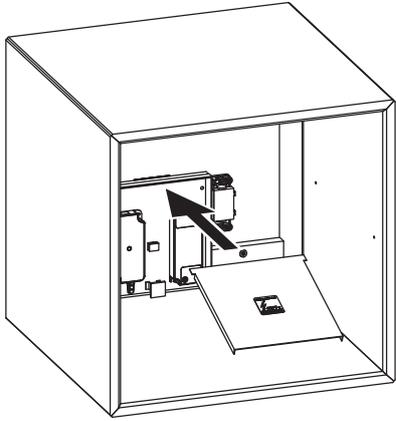






21

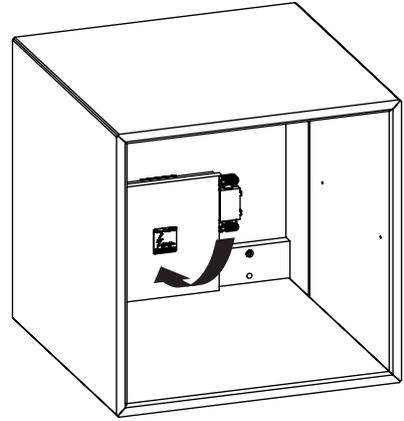

22

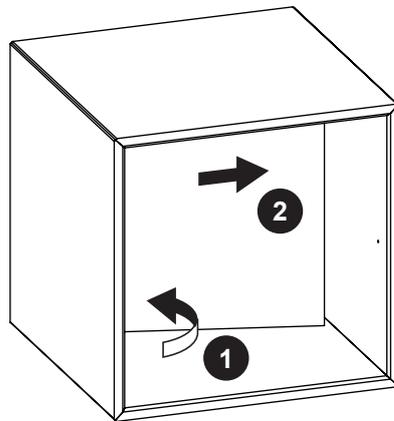

23

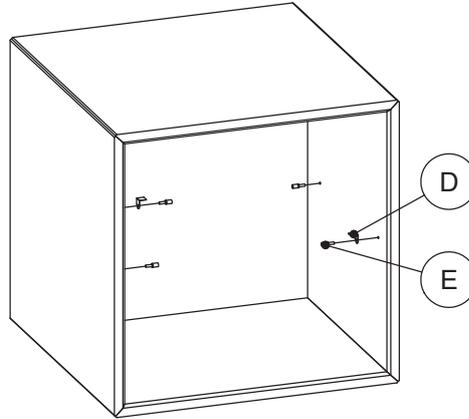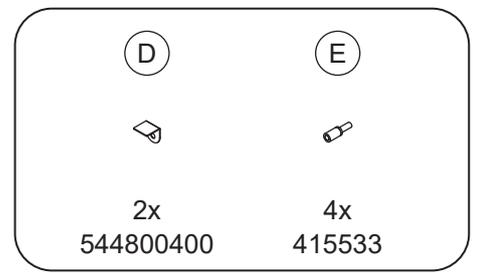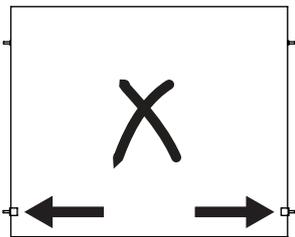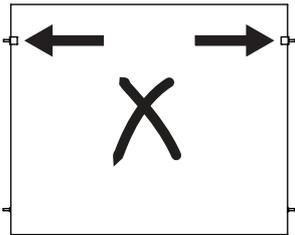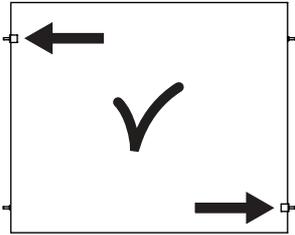

24

